

DISPLAY LED

1. BUTTON DESCRIPTION

- Press the ON / OFF button on the display to activate and deactivate the power system.
- The four LEDs that light up show the battery charge status. When the 4 lights are on the battery is charged. When only 1 light are on - charge the battery.
- The bike has 3 driving modes (LOW; MEDIUM; HIGH).
- In LOW mode the speed of the power is about 5km/h, in the MED mode, about 15km/h, in HIGH mode about 25 km/h.

2. DRIVING INFORMATION

- Press MODE to switch between modes.
- Press Button "light" to ON/OFF front and rear light.



3. FAILURE INFORMATION ON THE DISPLAY



Current strenght fault



Throttle fault



Hall's signal fault



Motor fault



Brakes fault



Connection fault